



// 6TH LINE SETTING ON THE RAZOR

Your new kite can be use on a 6 lines setting.

Please read the following instructions to set up the Razor on a 4 lines bar.

Step 01 : Remove the 5th line from your bar and from the kite

Step 02 : Attach the 6th line on the flying lines at the 3m extension connection

Step 03 : Attach the other side of the 6th line on the leading edge of the razor to the extra points 2 panels away from the centre



2013 RAZOR 6L	5.5	7.0	9.0	11.0	13.0
#	LENGTH IN CM				
6TH LINE B	457	478	502	522	543